

 Tag us on Instagram!  
[@sternmastermarinetools](https://www.instagram.com/sternmastermarinetools)

 Follow us on Facebook!  
[Facebook.com/SternmasterMarineTools](https://www.facebook.com/SternmasterMarineTools)



[CustomerService@Sternmaster.net](mailto:CustomerService@Sternmaster.net)

1-800-305-8117

[www.SternmasterMarine.com](http://www.SternmasterMarine.com)

[Facebook.com/SternmasterMarineTools](https://www.facebook.com/SternmasterMarineTools)

**STERNMASTER**  
MarineTools™ 

---

## SERVICE CART



# ME-220 PRODUCT MANUAL

---

[CustomerService@Sternmaster.net](mailto:CustomerService@Sternmaster.net)

411 N Centennial St  
Zeeland, MI 49464

[SternmasterMarine.com](http://SternmasterMarine.com)  
1-800-305-8117

## ME-220 SERVICE CART



Contact us with any questions or concerns.

**Be cautious when unloading from skid to prevent caster damage.**

Pick the cart straight up and set it straight down to avoid bending or twisting the casters.

## FIRST USE INSTRUCTIONS

**Place your battery in the box and connect the terminals.**



### Attach Hose Reel

Remove the hardware from the filter drain and reattach with the hose reel in place.



### Pump Switch and Wireless Remote

The pump remote turns power to the pump on & off.



The pump switch controls the direction of flow. The center position is "Off". The red light indicates pumping oil **OUT** of the 16 gallon oil tank.



### Priming the Pump.

Although we ship the cart with some oil in the hose, it does not ship primed.

Your first use will prime the pump. After the initial priming it should not need to be primed again.



### We do not provide a male hose fitting.

Due to the wide variety of preferences and application types, we provide the standard female hose end fitting.

You may need to supply your own preferred attachment for some applications.